


7040, 7042, 7044 Avedon Mirror  
Installation Guide




Mirror arrives as pictured above:

- Wall brackets attached to wood board
- Mirror slid onto wall brackets, glass not installed

# GREGORIUS | PINEO


## 7040, 7042, 7044 Avedon Mirror Installation Guide

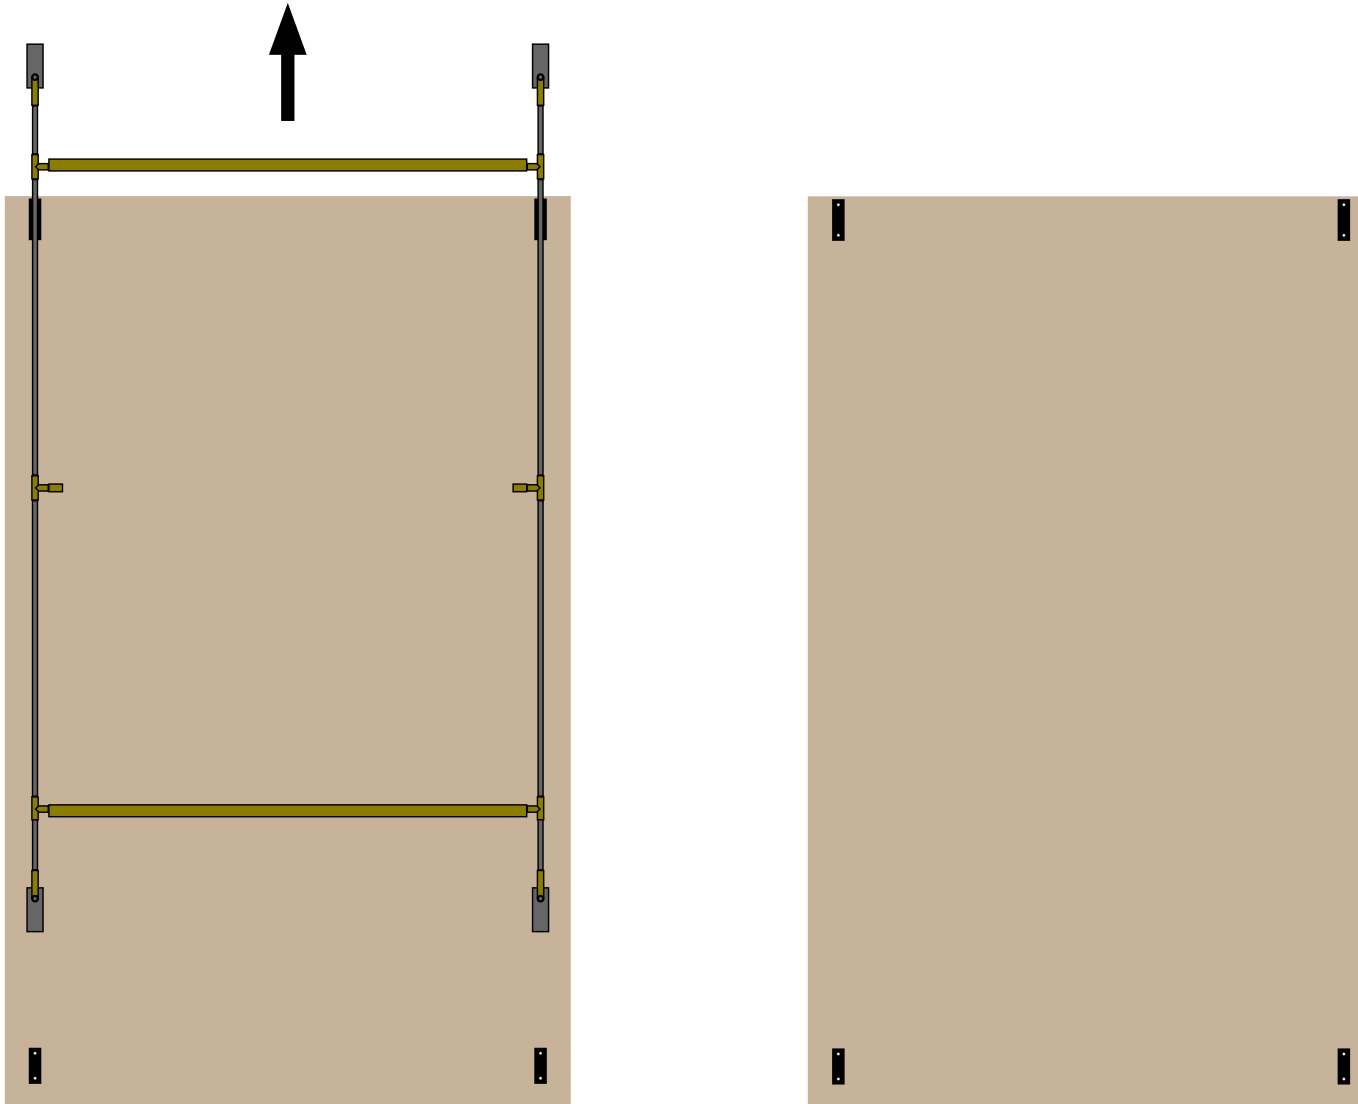

1) Remove mirror frame from wall brackets

# GREGORIUS | PINEO


## 7040, 7042, 7044 Avedon Mirror Installation Guide

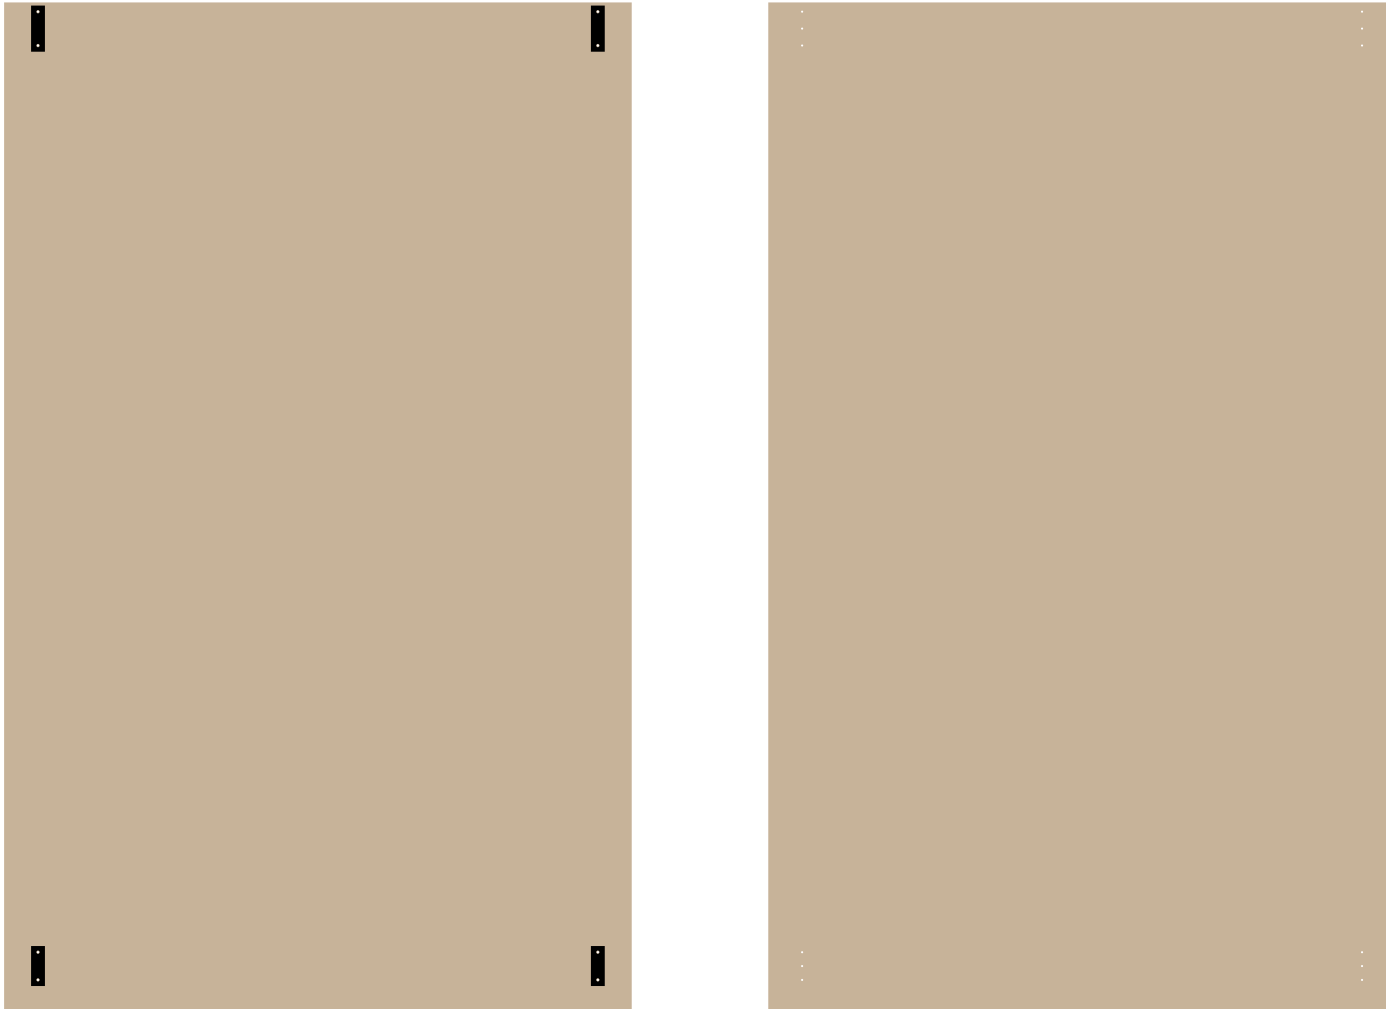

2) Remove wall brackets from board (2 screws with nuts per wall bracket)

# GREGORIUS | PINEO

## 7040, 7042, 7044 Avedon Mirror Installation Guide

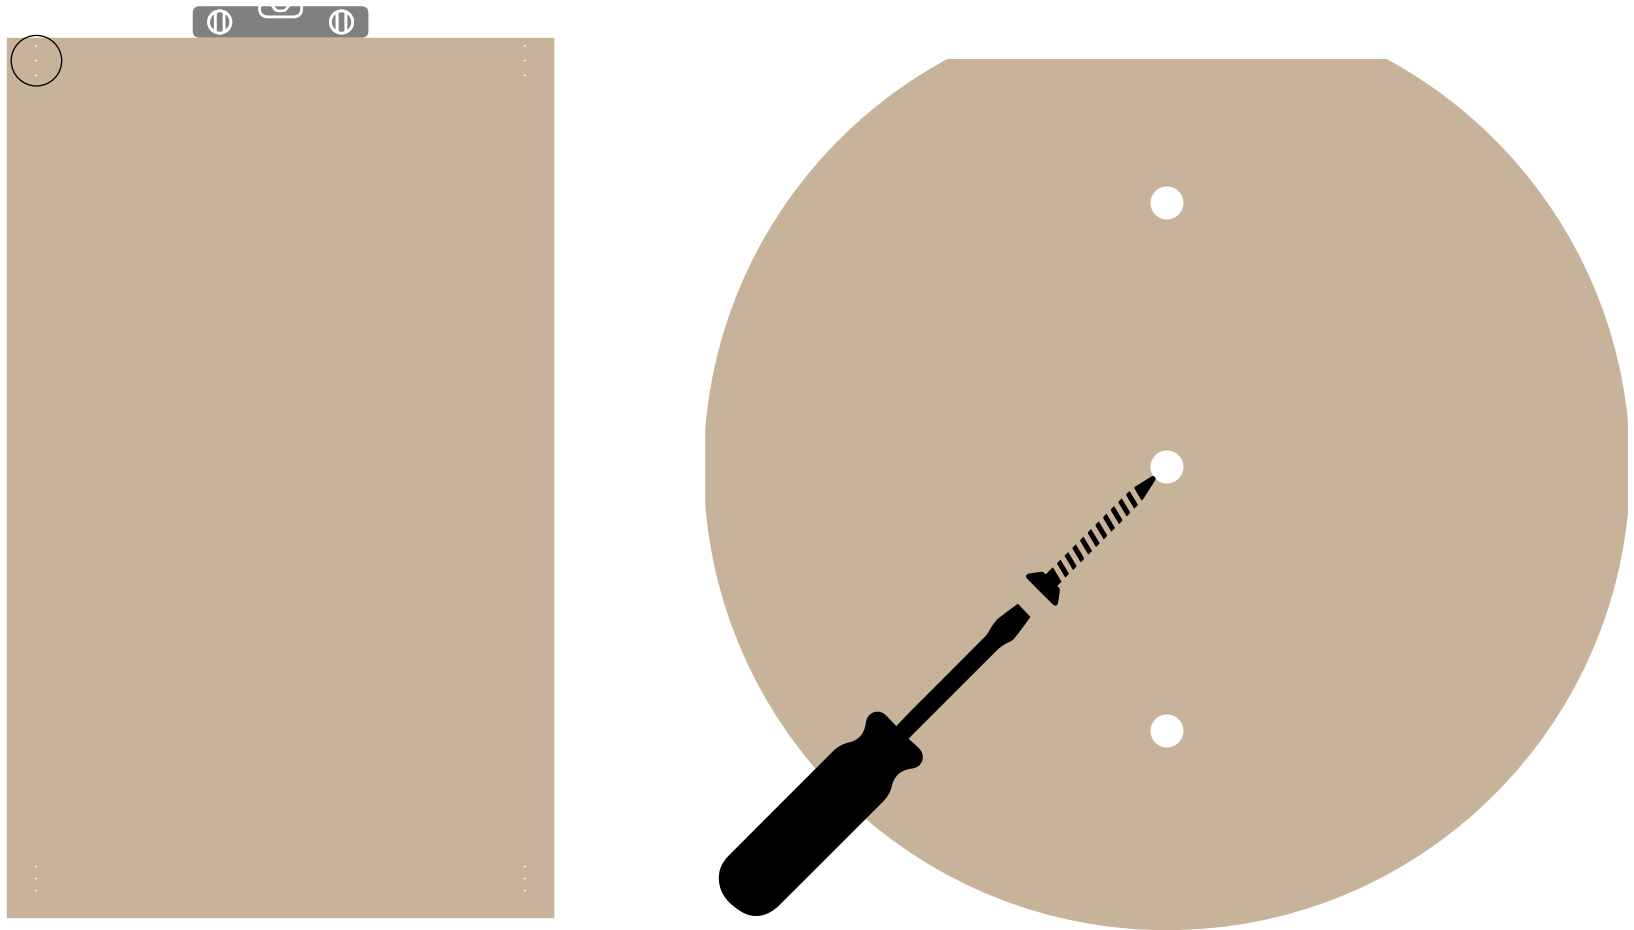


3A) Place wood on wall and make sure top edge is level

3B) Screw through center holes and into wall to hold  
board in place while hole locations are predrilled

GREGORIUS | PINEO


7040, 7042, 7044 Avedon Mirror  
Installation Guide

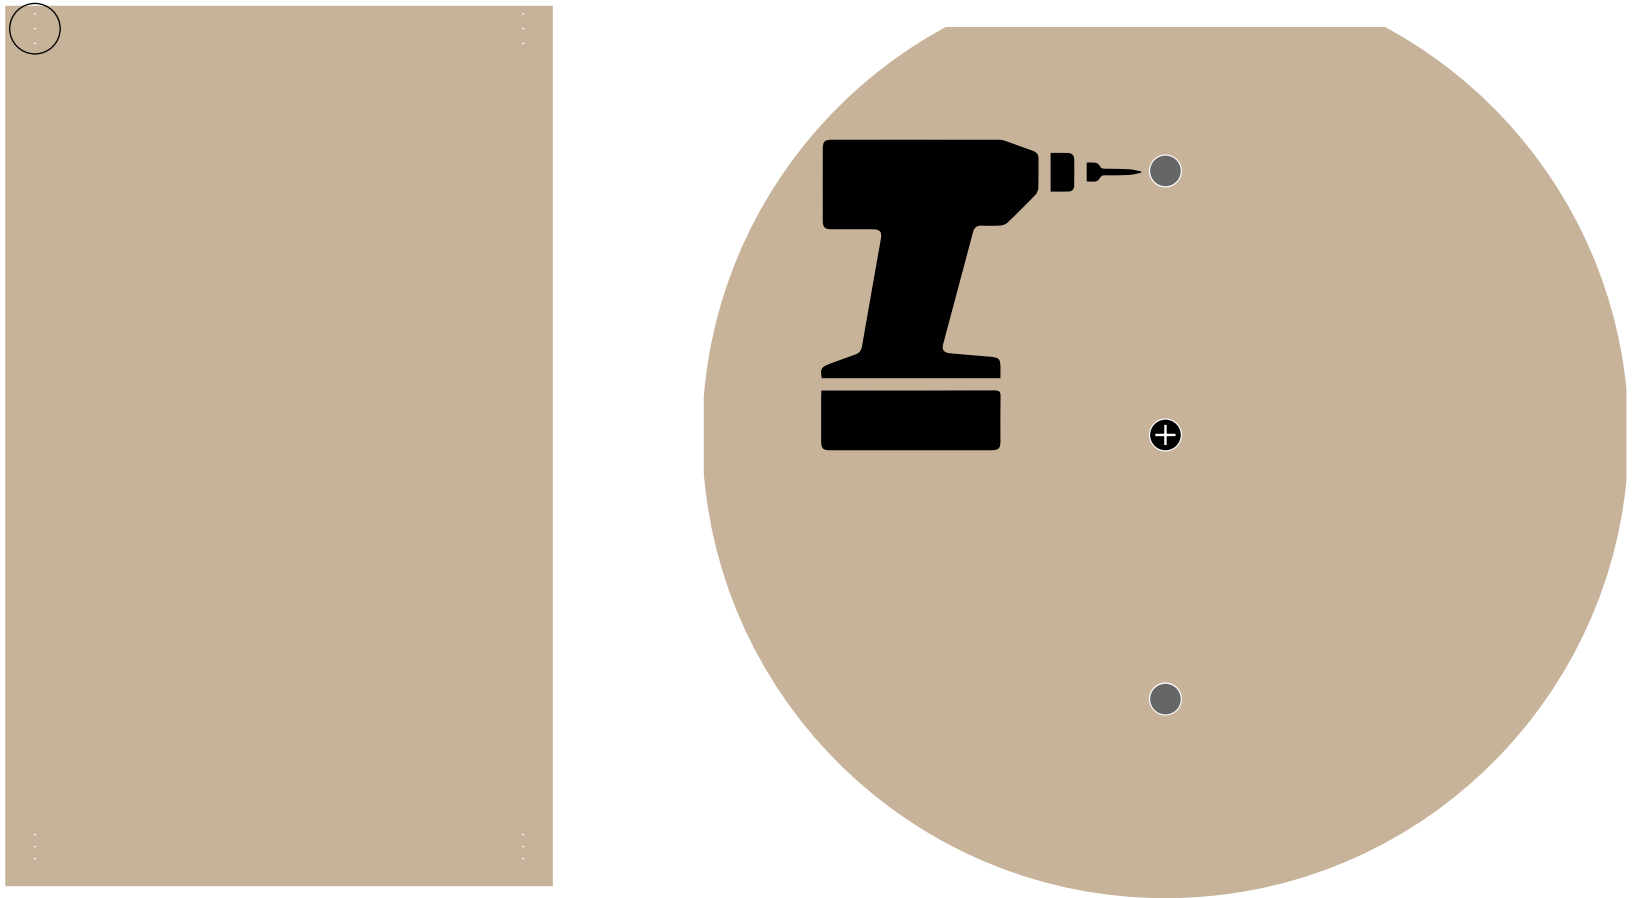

4) Pre-drill two (2) holes per wall bracket

# GREGORIUS | PINEO


## 7040, 7042, 7044 Avedon Mirror Installation Guide

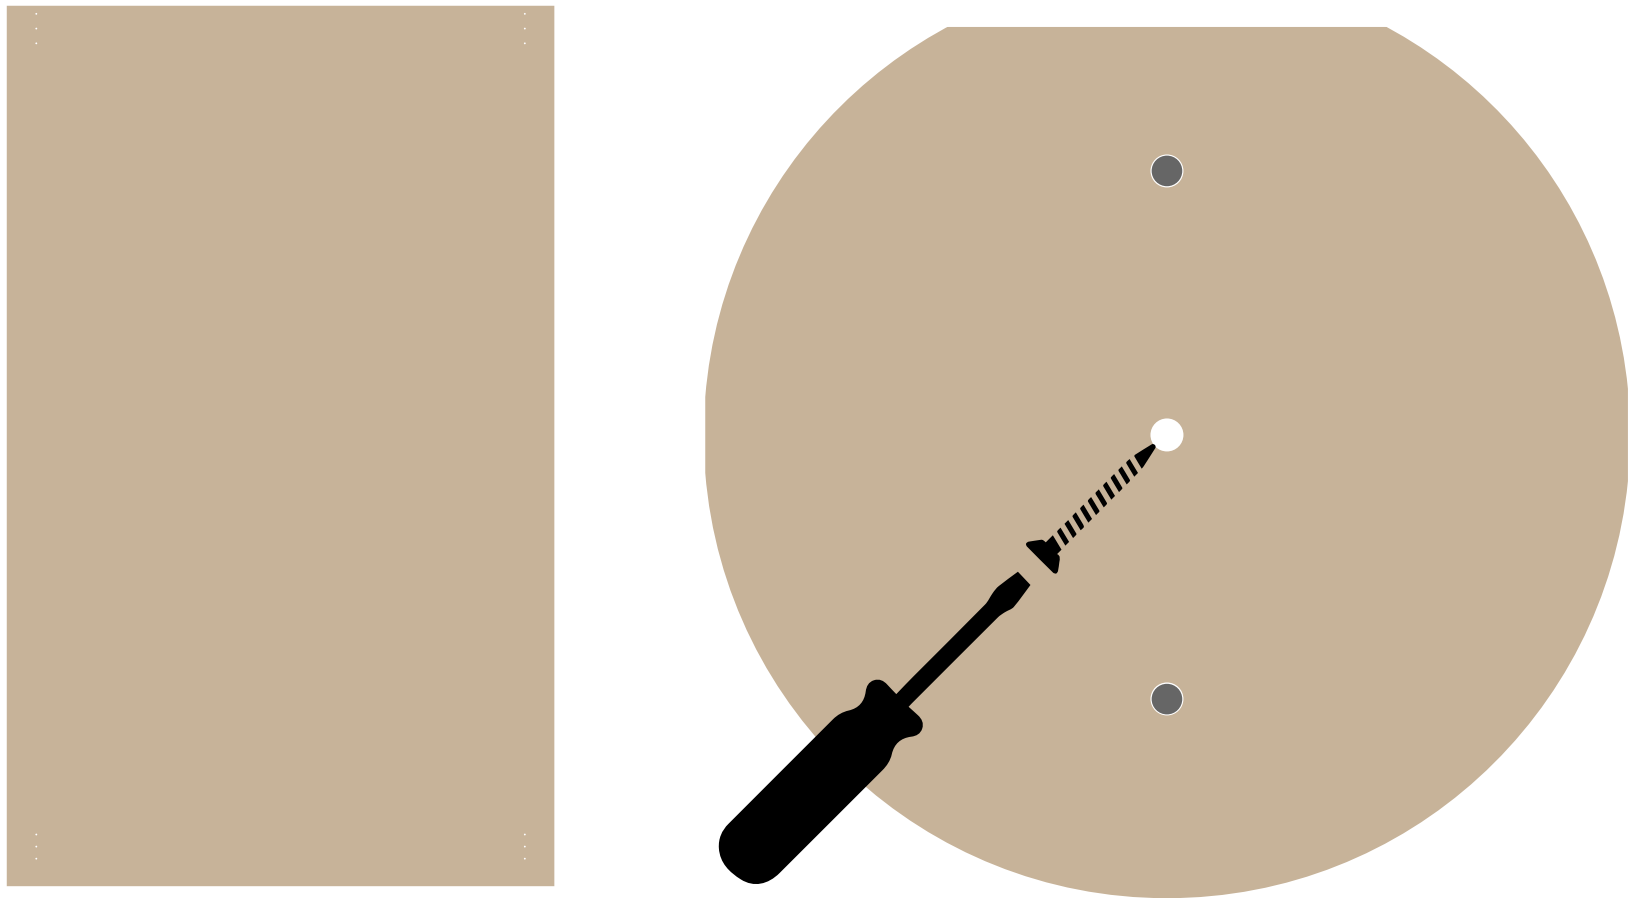

- 5a) Remove center screws
- 5b) Remove board from wall

# GREGORIUS | PINEO

## 7040, 7042, 7044 Avedon Mirror Installation Guide

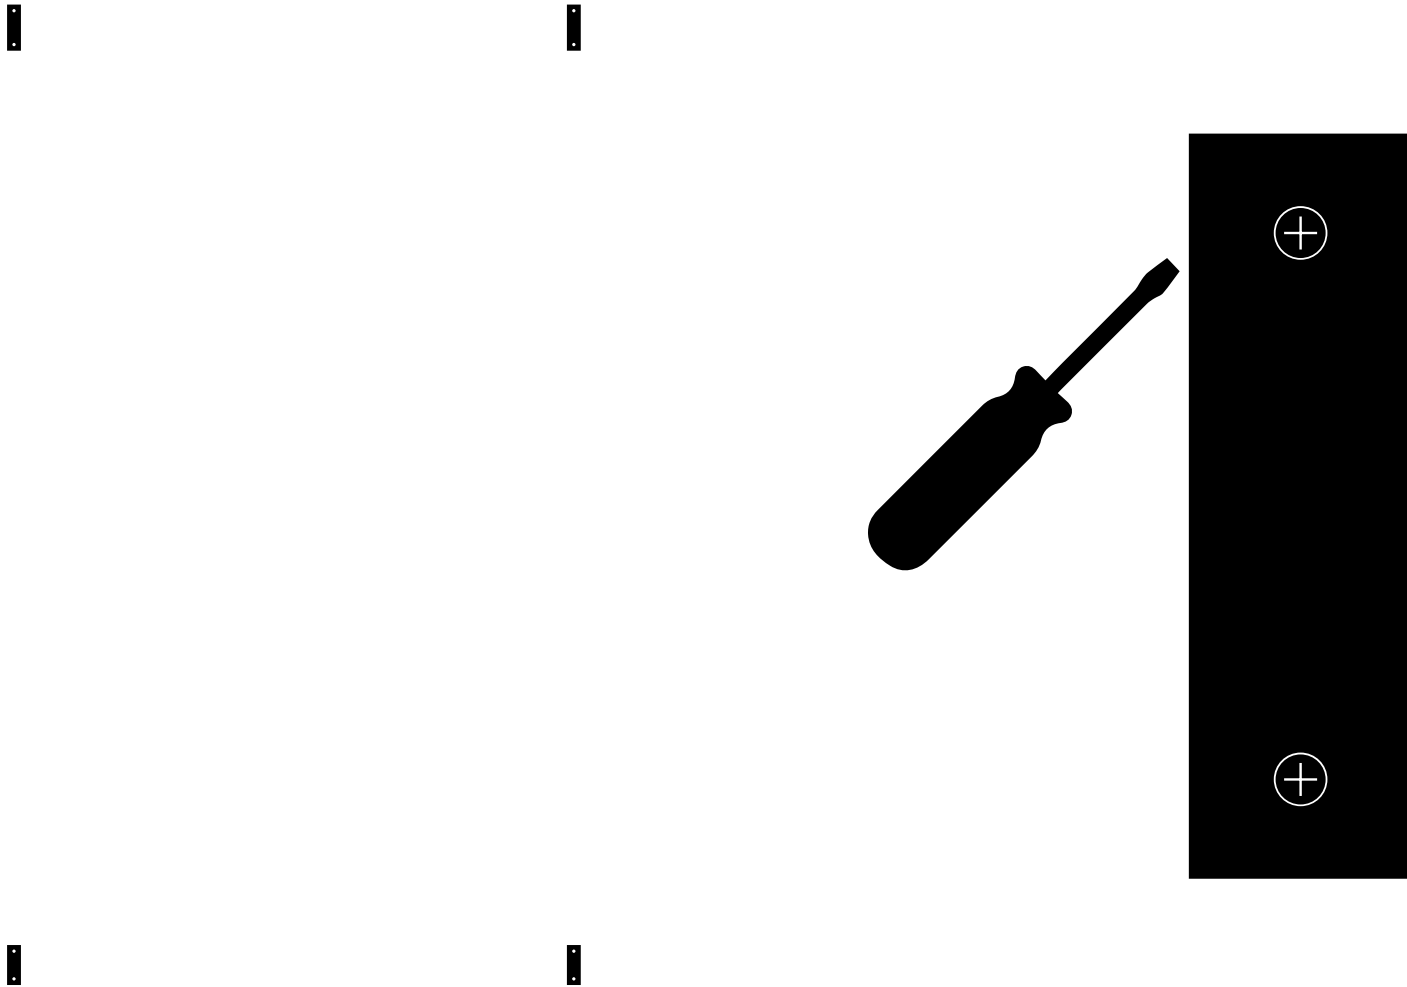


6) Install four (4) wall brackets using pre-drilled locations

The wall brackets have countersunk holes to accommodate #12 wood screws.  
Wall material and stud locations will dictate screw length and the need for wall anchors.

# GREGORIUS | PINEO

## 7040, 7042, 7044 Avedon Mirror Installation Guide

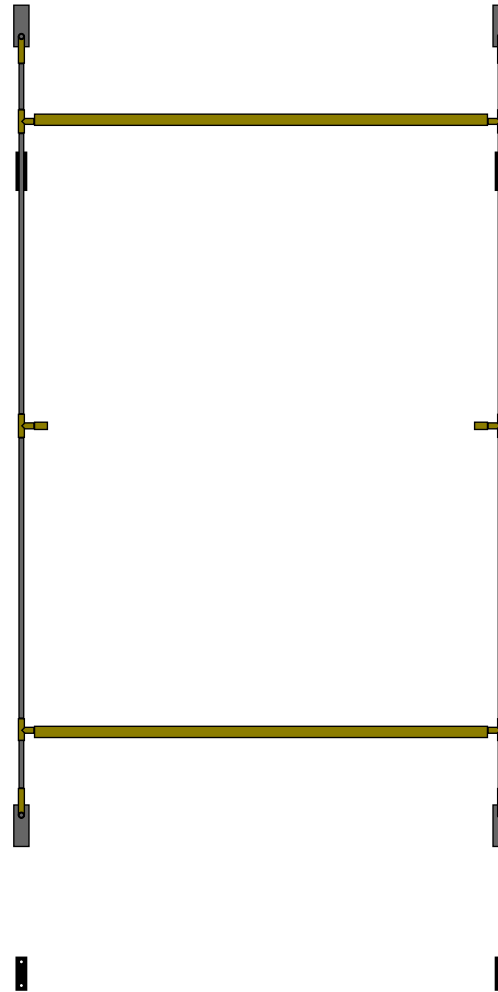


- 7a) Test installation recommended prior to installing glass
- 7b) After confirming proper wall bracket installation,  
remove frame from wall brackets to install glass




# GREGORIUS | PINEO

## 7040, 7042, 7044 Avedon Mirror Installation Guide

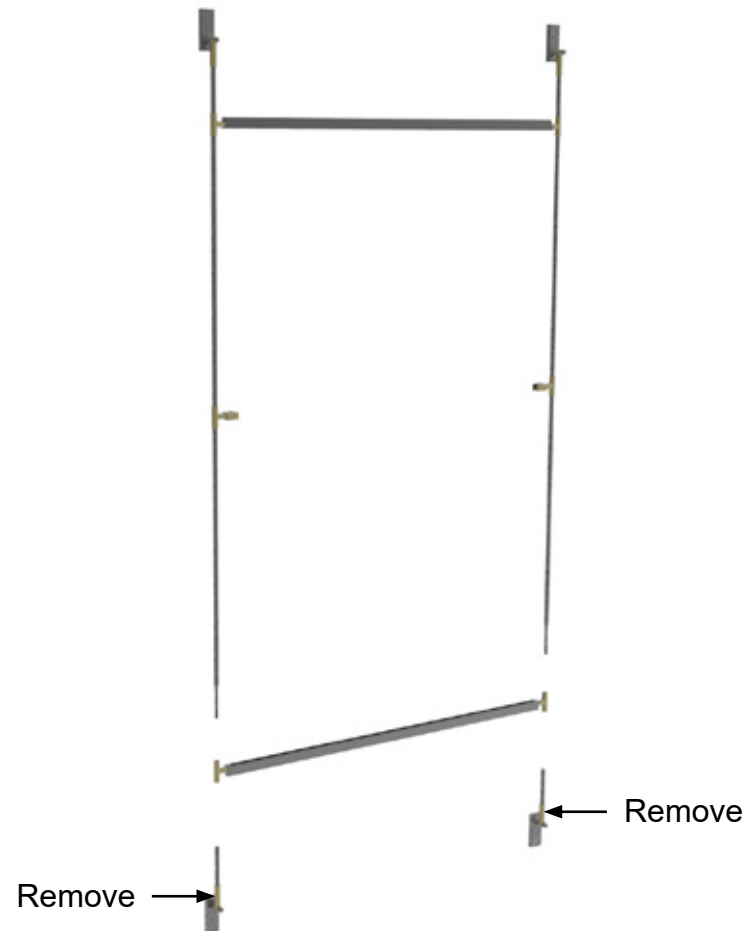

- 8a) Unscrew bottom two parts (twist counterclockwise) to remove
- 8b) Mirror support will slide off frame

7040, 7042, 7044 Avedon Mirror  
Installation Guide

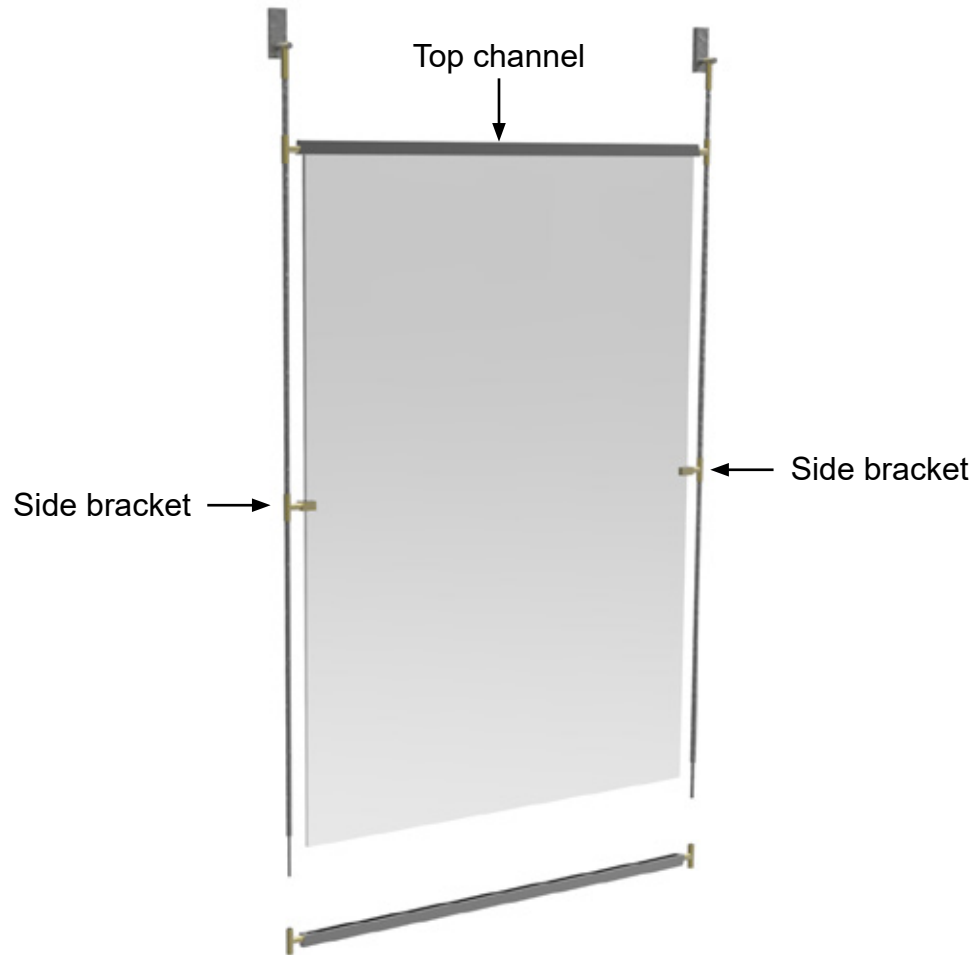

- 9a) Slide glass through side brackets and into top channel.
- 9b) Slide bottom channel onto frame, fitting glass into channel

# GREGORIUS | PINEO


## 7040, 7042, 7044 Avedon Mirror Installation Guide



- 10) Screw bottom parts onto mirror frame (turn clockwise)  
to lock mirror support and glass in place

# GREGORIUS | PINEO

## 7040, 7042, 7044 Avedon Mirror Installation Guide

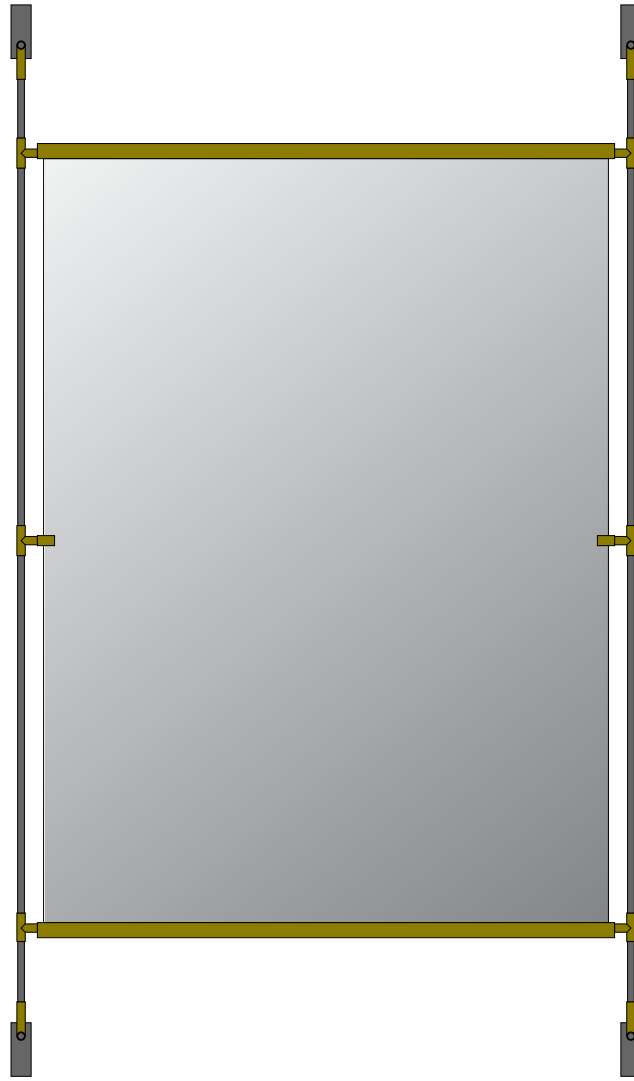

11) Slide assembled mirror onto wall brackets