


GREGORIUS | PINEO


7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

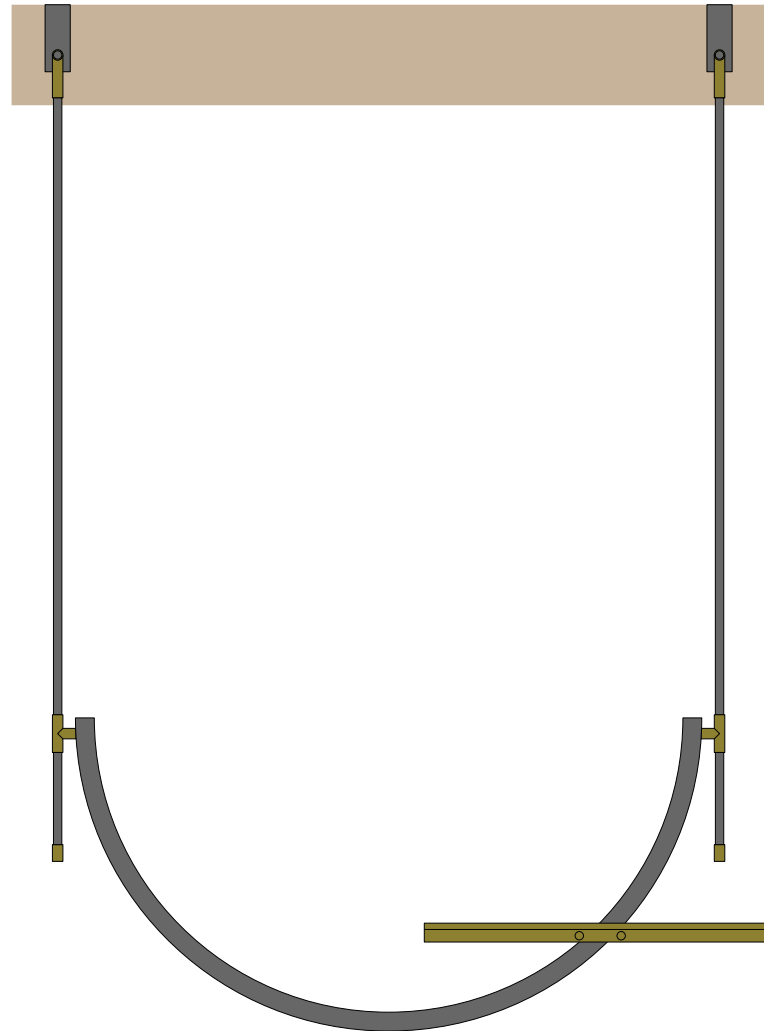

- Mirror arrives as pictured above:
- Wall brackets attached to wood board
 - Mirror slid onto wall brackets, glass not installed

GREGORIUS | PINEO

7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

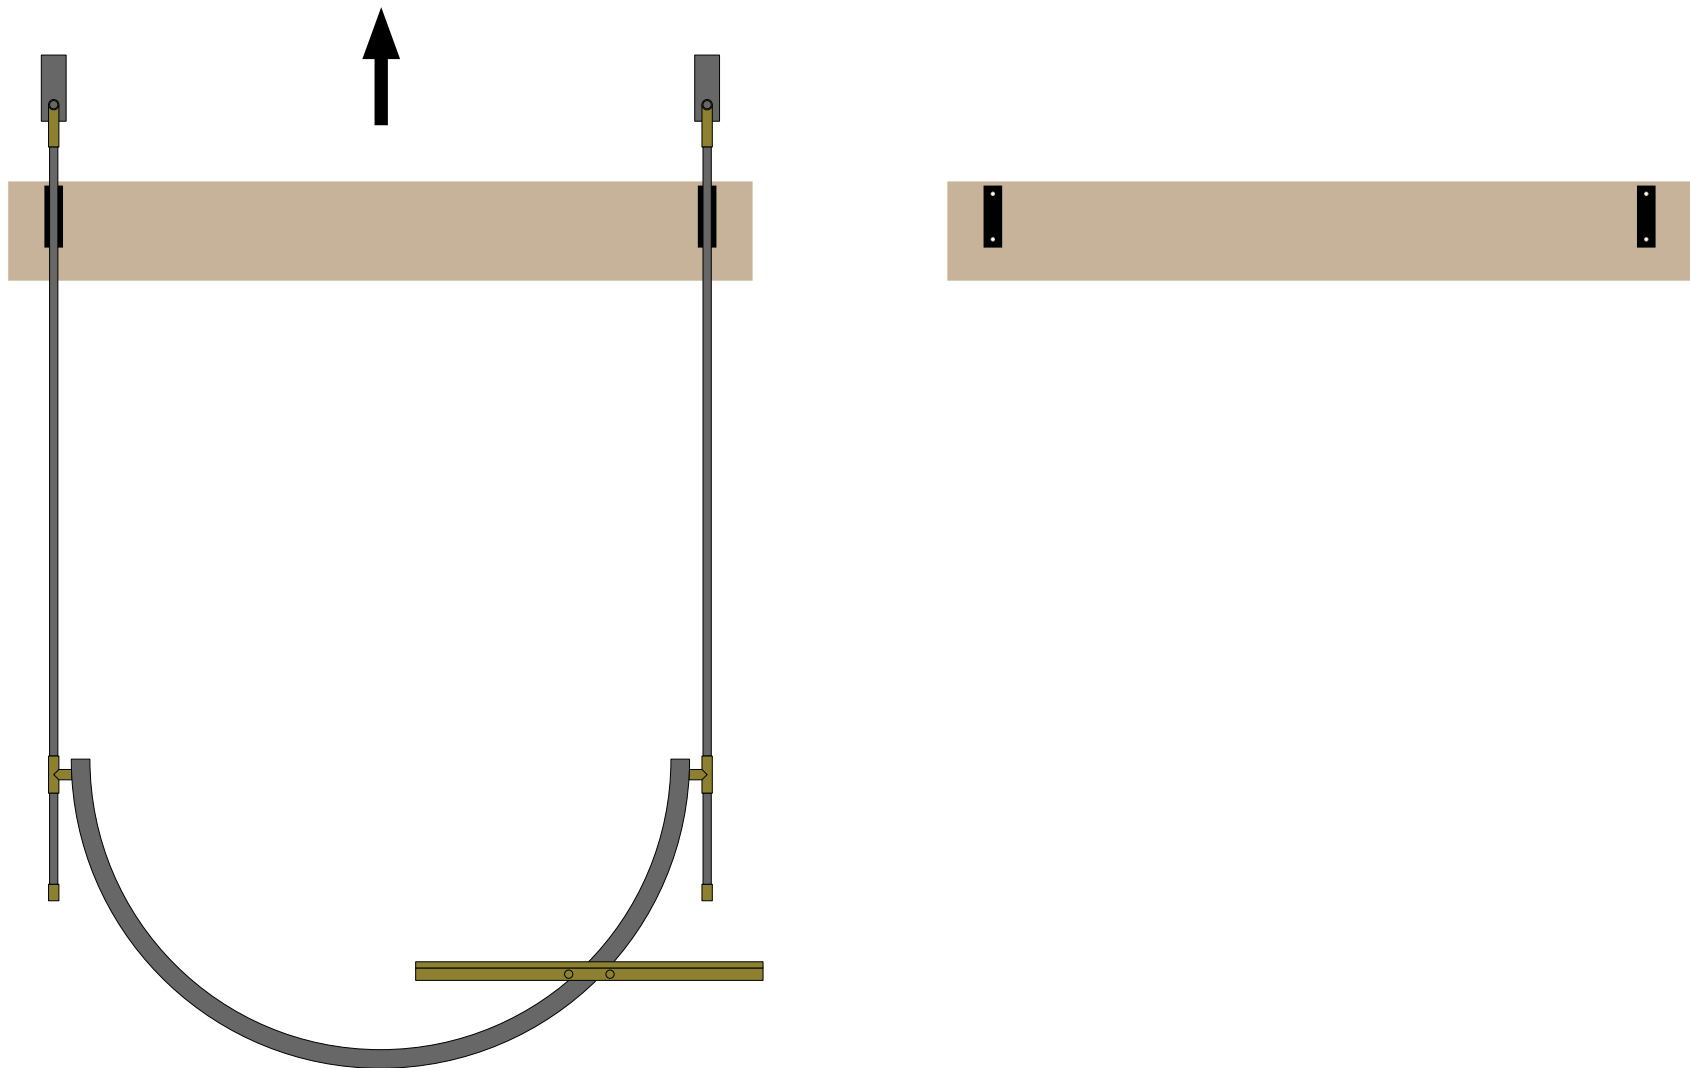

1) Remove mirror frame from wall brackets

GREGORIUS | PINEO


7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide



2) Remove wall brackets from board (2 screws with nuts per wall bracket)

GREGORIUS | PINEO

7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

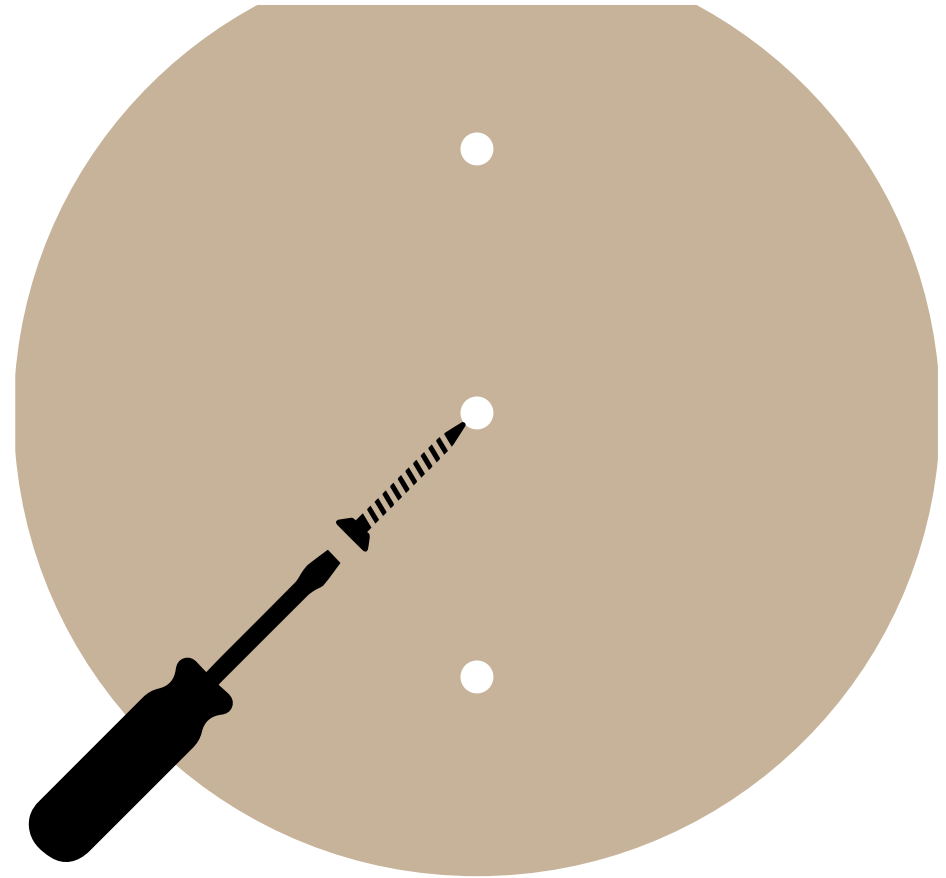


3A) Place wood on wall and make sure top edge is level

3B) Screw through center holes and into wall to hold
board in place while hole locations are predrilled

GREGORIUS | PINEO


7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

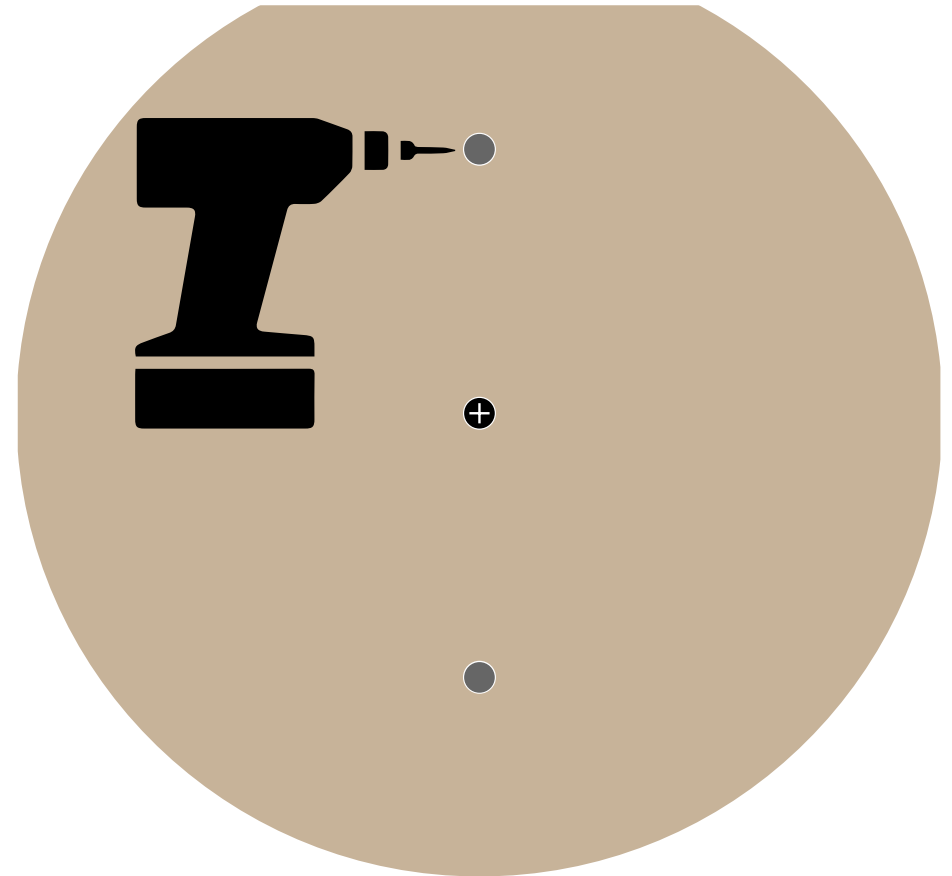

4) Pre-drill two (2) holes per wall bracket

GREGORIUS | PINEO


7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

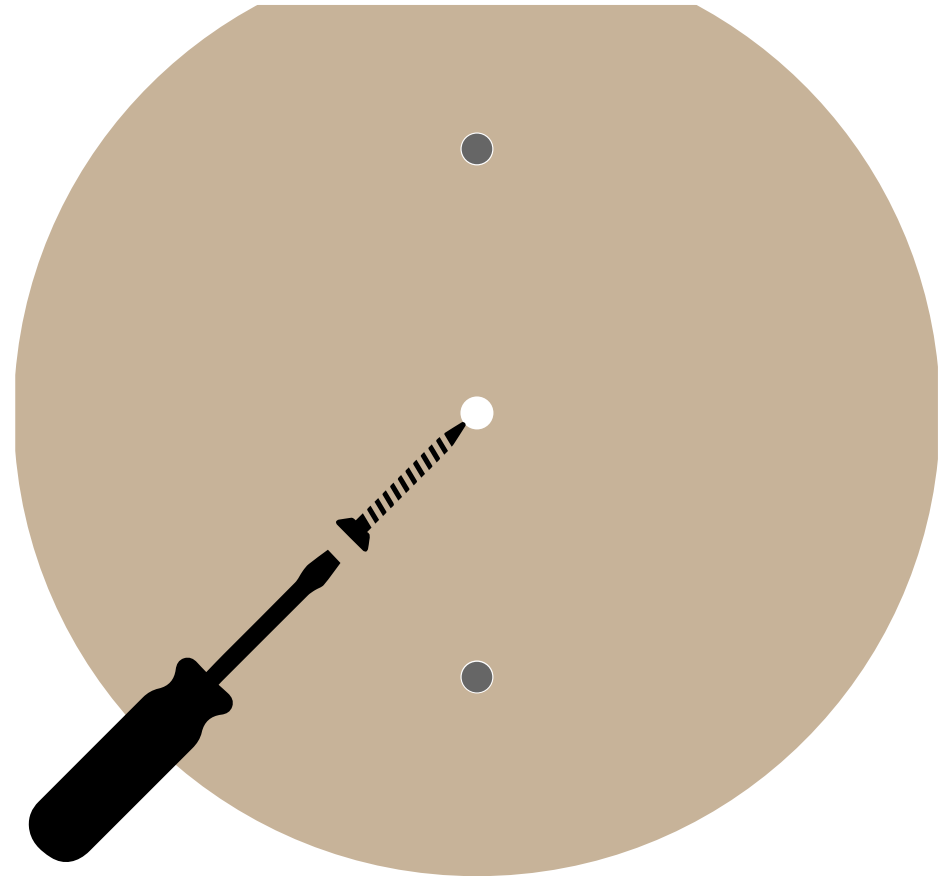

- 5a) Remove center screws
- 5b) Remove board from wall

GREGORIUS | PINEO

7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

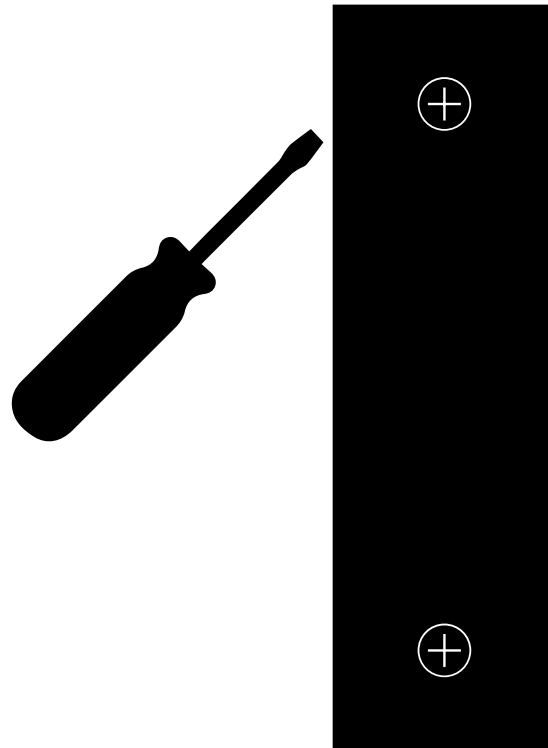


6) Install two (2) wall brackets using pre-drilled locations

The wall brackets have countersunk holes to accommodate #12 screws.

Wall material and stud locations will dictate screw length and the need for wall anchors.

GREGORIUS | PINEO


7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

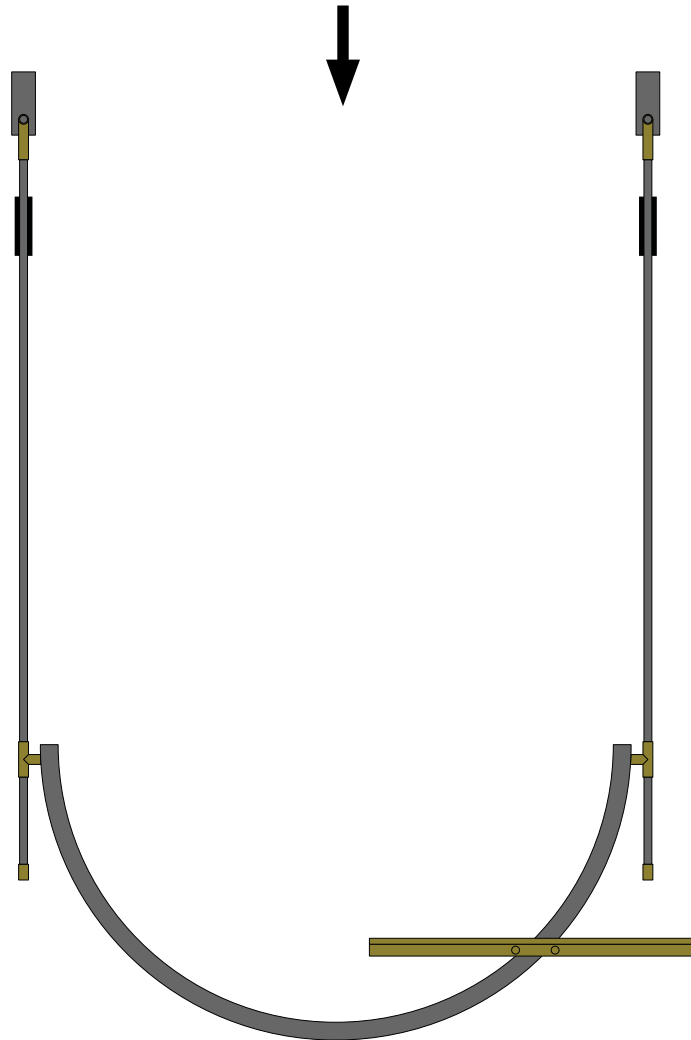

7) Slide frame onto wall brackets

GREGORIUS | PINEO

7047, 7049, 7051 Avedon Mirror (round, shelf) Installation Guide

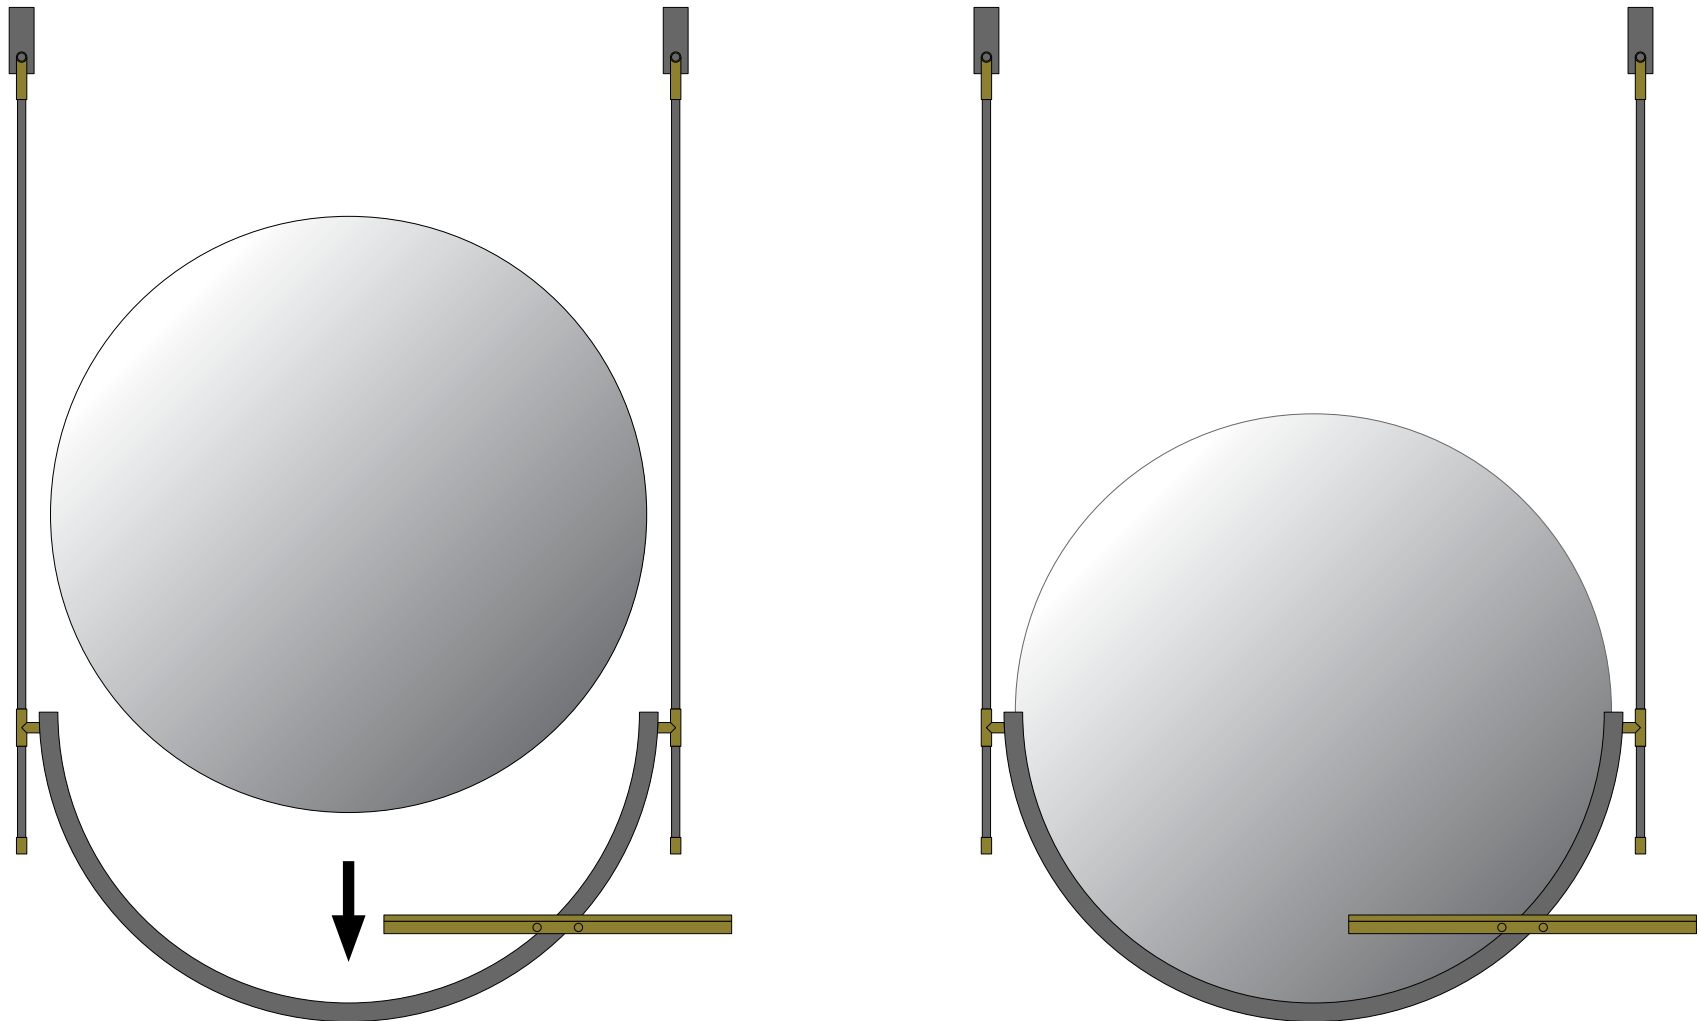

8) Slide glass into frame